


DIGITAL CLOCK

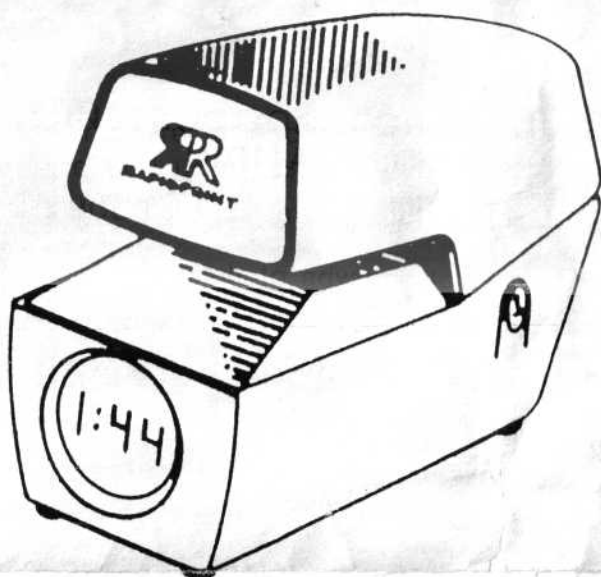

INSTRUCTIONS FOR SETTING DIGITAL CLOCK

1. Press HOUR switch until correct hour is displayed.
2. Press MIN. switch to advance to correct minute setting.

To set the digital clock to the precise time, press the MIN. switch until the minutes display shows the current time. At the instant the minute advances on a reference clock, quickly press and release the MIN. switch.

The minutes will advance by one and seconds will be set to zero.

If a power failure has occurred, even for as brief a time as one second, upon restoration of power the display will flash at a 1 Hertz rate to indicate that the time displayed is incorrect.